


- 1** Locate bolt holes under seat.
- 2** Install Chair Bracket with two bolts/nuts/washers
- 3** Attach RFS block to bracket with (4) 8-32 x 1.75" Screws (kit 27870)

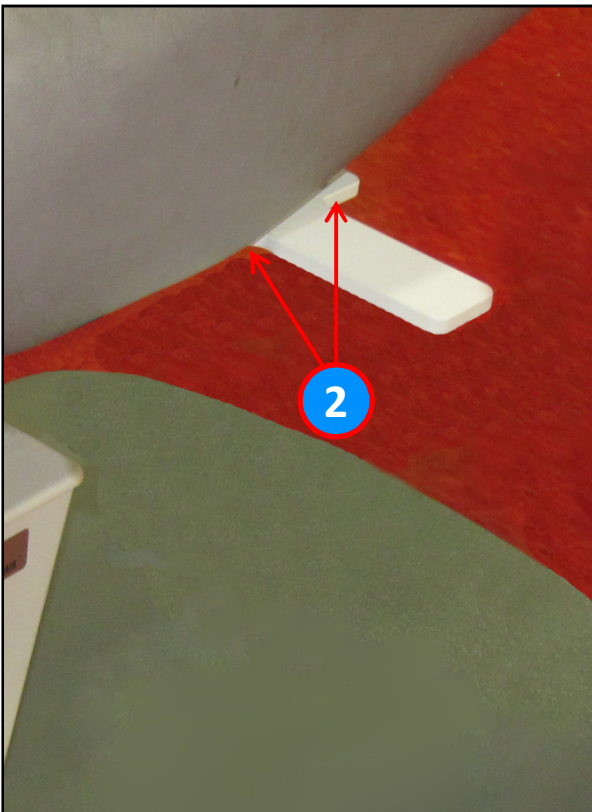

- 4** Connect Mixed Gas & Vacuum Scavenger hoses from the J-Box, through the chair and to back of the RFS Block



- 5** Attach the Remote Bag Tee & Scavenger Controller to the front of the RFS Block

